

Thank you for choosing a high quality fly reel from Guideline Flyfish.
Please read following notes and instructions before use.

Easy care instructions;

We recommend Super Lube products with Teflon to lubricate all parts.

- Always keep main shaft and one-way clutch coated with Teflon based all-purpose grease.
- Always remove sand and grit after use.
Rinse reel in warm soapy water after each use exposure to salt water.
- Always back-off drag knob to release pressure on the main spring when not in use.
- Store in protective reel case both on and of the rod.
- When reel is submerge or after cleaning, give it a few quick shakes to remove any moisture that might remain between the spool and frame edges.

How To turn the reel from right hand to left hand wind.


Do the following:

- Release the spool from reel house by unscrew the spool cap (# 44)
- Release spool from house, then release the E-clip (# 36) plus the Teflon washer.
- Pull the bearing holder (# 32) off it's shaft. In front of this you will find the one/way clutch.
- Shake out the one /way bearing (# 34 one-way clutch) In some cases you need a thin tool to pull with.
- Turn the one/way bearing upside down, so that the side that was facing upwards, now is facing down towards the clutch holder (# 32)
- Push and align the o/way bearing to fit into the slots.

IMPORTANT NOTE! It is important that the parts are properly fitted into each others slot before you put back the housing cover in place again.

For more information about your Fly reel please go to our website or send us an e-mail.

Website; www.guidelineflyfish.com E-mail; info@guidelineflyfish.com

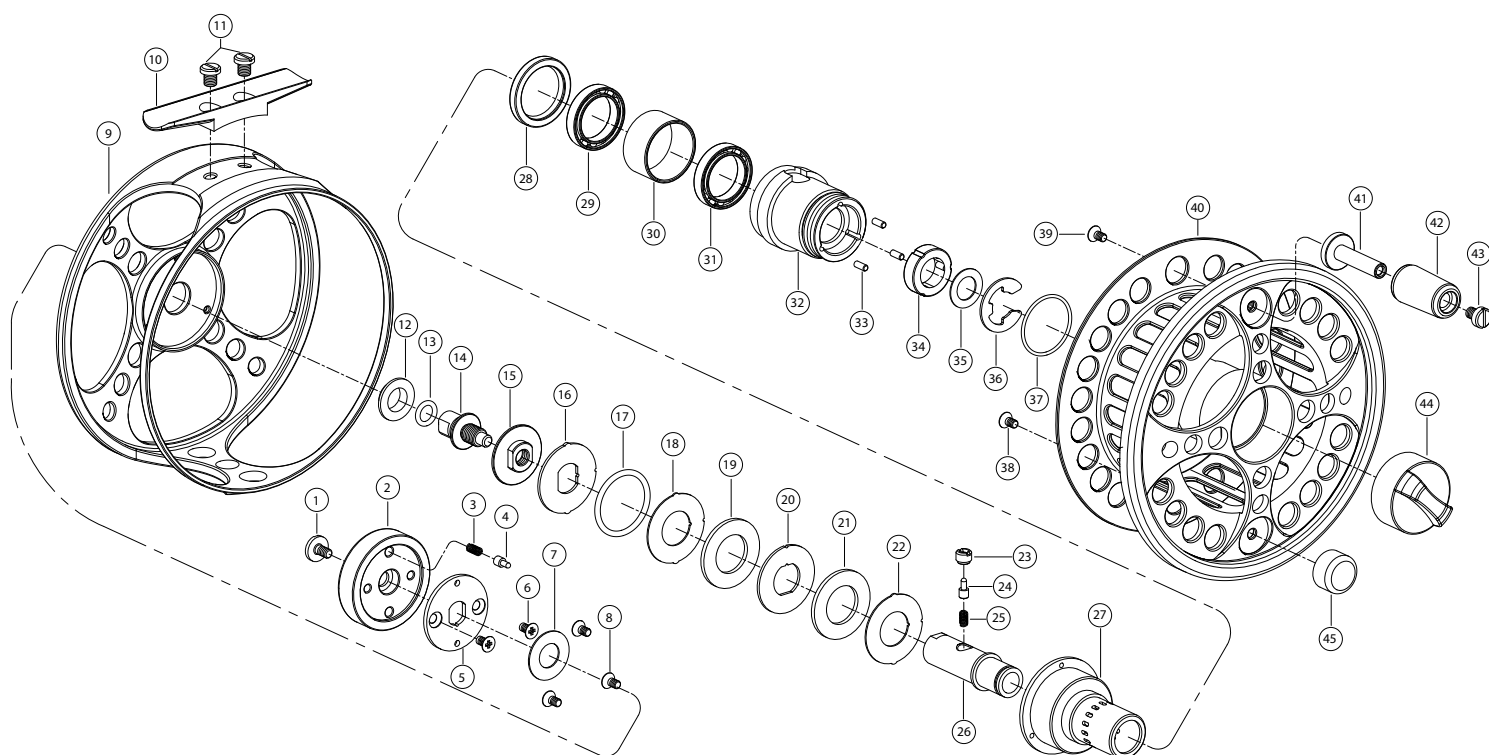

KEY NO	PART NAME	KEY NO	PART NAME	KEY NO	PART NAME	KEY NO	PART NAME	KEY NO	PART NAME
1	SCREW (D/K)	10	FOOT	19	DRAG WASHER	28	SEAL RING	37	O-RING (SPOOL CAP)
2	DRAG KNOB	11	SCREW (FOOT)	20	"D" WASHER	29	BALL BEARING	38	SCREW(BALANCE)
3	DRAG CLICK SPRING	12	INNER SEAL	21	DRAG WASHER	30	RING	39	SCREW (HANDLE RIVET)
4	DRAG CLICK PIN	13	O-RING (D/S)	22	"A" WASHER	31	BALL BEARING	40	SPOOL
5	DRAG KNOB PLATE	14	DRAG SCREW	23	CLICK BUSH	32	BEARING HOLDER	41	HANDLE RIVET
6	SCREW (D/P)	15	DRAG NUT	24	CLICK PIN	33	PIN	42	HANDLE KNOB
7	DRAG KNOB SEAL	16	"A" WASHER (A)	25	CLICK SPRING	34	O/WAY CLUTCH	43	SCREW (HANDLE KNOB)
8	SCREW (D/H)	17	O-RING (DRAG)	26	MAIN SHAFT	35	WASHER (TEFLON)	44	SPOOL CAP
9	FRAME	18	"A" WASHER (B)	27	DRAG HOUSING	36	E-CLIP	45	BALANCE